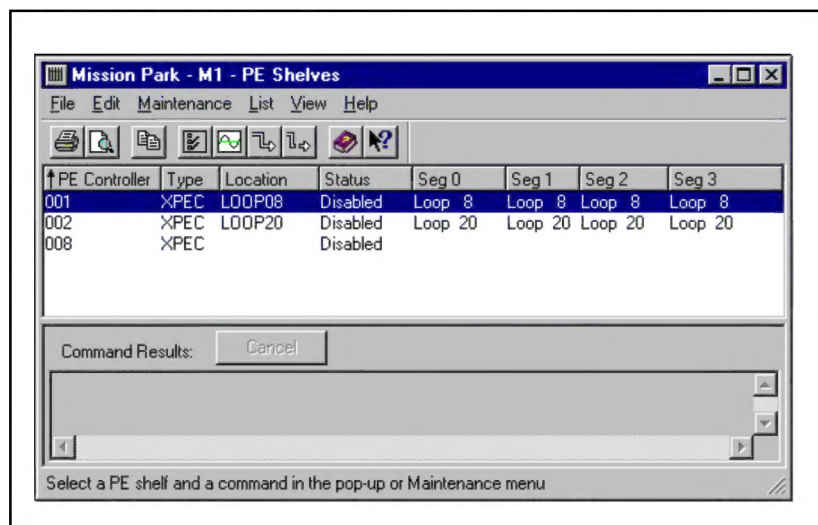

PE Shelves window

The PE Shelves window displays the status of the Peripheral Controller Cards for each PE Shelf on the Meridian 1.

Launching PE Shelves

From the System window, under **Core Equipment**, double-click the **PE Shelves** icon. The PE Shelves window appears as shown in Figure 9.

Figure 9
PE Shelves window



PE Shelves column definitions

The PE Shelves window provides columns of information about each shelf in the system. The PE Shelves list is initially sorted by Controller card number. Table 9 describes each column.

Table 9
Column Descriptions

Column Name	Description
PE Controller	Identification number associated with the PE Controller Card.
Type	Type of controller card.
Location	Location of the PE shelf containing the PE Controller Card.
Status	Current status of the PE Controller Card.
Seg 0 to Seg 3	Identifies the loop supported by each of the four PE shelf segments.

Supported Commands

Table 10 lists the supported hardware and commands. Use System Terminal for hardware or commands not supported by the PE Shelves window.

Table 10
Supported PE Shelves commands

Hardware	Supported	Commands supported
Peripheral Controller (XPEC) cards	yes	all
Fiber Remote (CARR)	yes	all
Fiber Remote (FPEC)	yes	all